

Voting Instructions for AccuVote-TS™

If you need assistance, please contact the Chief Election Judge.

Voters requiring special assistance and disabled voters.



Maryland's new voting system provides audio and magnified ballots.

Ask your election judge about these voting options.



Start: Insert Card

1

Insert voter access card into slot at right of screen. Card should be face up with the arrow first. Push card firmly until it clicks.

Read "Instructions to Voters"

Touch "Start" to access ballot.

2

Select Candidates or Questions

Touch the box next to the candidate or question of your choice. To change or cancel your selection, touch the box again.

Touch "Next" to advance the ballot page.

Touch "Previous" to go back.

4

Review & Cast Ballot

On Summary Page, review your choices.

To go back, Touch a contest or Touch "Review Ballot".

Touch "Cast Ballot" when ready to record your vote.

Once your ballot is "cast," you may not vote again.

Finish: Remove Card

Remove the voter access card and return it to the election judge.

5

Maryland VOTES

In Touch With The Future

